

**Duravit AG**  
Werderstr. 36  
78132 Hornberg  
Germany  
Phone +49 7833 70 0  
Fax +49 7833 70 289  
info@duravit.com  
www.duravit.com

**Duravit UK Limited**  
Unit 7, Stratus Park  
Brudenell Drive  
Brinklow, Milton Keynes  
MK10 0DE  
Phone +44 845 500 7787  
Fax +44 845 550 7786  
info@uk.duravit.com  
www.duravit.co.uk

**Leben im Bad**  
Living bathrooms



# Inipi

## Operating Instructions

Best.-Nr. 66419/14.03.3 · We reserve the right to make technical improvements and design modifications to the products illustrated.



# Content

 
<b>1. Diagrams and Pictures .....</b>	<b>6</b>
1.1 Configuration .....	6
1.2 Control panel / Remote control .....	7
1.3 Display .....	8
1.4 Menu Hierarchy .....	9
<b>2. For your Safety .....</b>	<b>10</b>
2.1 Normal use .....	10
2.2 Safety information .....	10
<b>3. Description of Symbols .....</b>	<b>11</b>
<b>4. Product Information.....</b>	<b>12</b>
4.1 Controls .....	12
Remote control with charging station .....	12
Operator's Panel.....	12
4.2 Scenarios .....	12
4.3 Heater .....	13
Warm-up time .....	13
Timer .....	13
Sauna stones .....	13
4.4 Hourglass timer .....	14
4.5 Vaporisation.....	14
4.6 Lighting .....	14
Colours .....	14
Colour programmes.....	14
4.7 Music .....	15
Soundscape .....	15
Radio .....	15
External audio source .....	15
4.8 PIN.....	15
4.9 Emergency lighting.....	15
4.10 Note on the water-tightness (Inipi Ama).....	16
<b>5. Basics of Operation .....</b>	<b>16</b>
5.1 Buttons and their functions .....	16
5.2 Operating instructions .....	16
<b>6. Initial Start-up of the Sauna .....</b>	<b>17</b>
Step 1: Configure control panel.....	17
Step 2: Fill the vaporiser water tank.....	18
<b>7. Operating the Sauna .....</b>	<b>18</b>
7.1 Switching on the sauna.....	18

7.2	Switching off the sauna .....	18
7.3	Switching on a scenario .....	19
7.4	Switching off a scenario .....	19
7.5	Changing a scenario* .....	19
	... permanently .....	19
	... once / during a sauna session .....	20
7.6	Changing a scenario name* .....	20
7.7	Resetting a scenario* .....	20
7.8	Switch on the heater .....	20
	... with preset bathing settings .....	20
	... with manual temperature selection .....	21
	Switching the heater timer on .....	21
	Turning off timer for heater .....	22
7.9	Switching off the heater .....	22
7.10	Switching on lighting .....	22
	Switching on colours .....	22
	Switching on a colour programme .....	22
7.11	Switching off lighting .....	23
7.12	Setting the intensity of the lighting .....	23
7.13	Switching on the timer .....	23
7.14	Switching on music .....	23
	Switching on soundscapes .....	23
	Switching on the radio .....	23
	Playing from an external audio source .....	23
7.15	Switching off the music .....	24
7.16	Searching for and storing a radio station .....	24
7.17	Varying the sound volume .....	24
7.18	Setting the treble .....	24
7.19	Setting the bass .....	24
7.20	Starting vaporisation .....	25
7.21	Filling the vaporiser water tank / adding fragrant essential oils .....	25
7.22	Charging the remote control .....	26
7.23	Connecting the remote control with Bluetooth .....	26
<b>8.</b>	<b>Changing Settings .....</b>	<b>26</b>
8.1	Changing the time .....	26
8.2	Changing the time format .....	27
8.3	Displaying / hiding the time .....	27
8.4	Changing the date .....	27
8.5	Changing the units (°C/F) .....	27
8.6	Changing the language .....	27


8.7	Changing the intensity of the display .....	28
8.8	Changing the contrast of the display .....	28
8.9	Change PIN .....	28
8.10	Turning on the PIN-request .....	28
8.11	Turning off the PIN-request .....	29
8.12	Resetting back to defaults .....	29
8.13	Activating / deactivating the light ring on the charging station .....	29
<b>9.</b>	<b>Cleaning and Maintenance .....</b>	<b>29</b>
9.1	Outer surfaces .....	30
	Natural wood .....	30
	High gloss finish .....	30
	Melamine .....	30
9.2	Interior fixtures and fittings .....	30
	Cabin floor .....	30
	Seating and floor grids .....	30
9.3	Vaporiser water tank .....	30
9.4	Heater .....	30
9.5	Openings for the air supply .....	31
9.6	Collection tray .....	31
9.7	Replacing the sauna stones .....	31
9.8	Control Panel .....	31
9.9	Remote control .....	31
9.10	Charging station .....	31
9.11	Glass .....	32
9.12	Acrylic .....	32
	Cleaning .....	32
	Damage .....	32
9.13	Plumbing hardware .....	32
<b>10.</b>	<b>Disposal .....</b>	<b>33</b>
<b>11.</b>	<b>Troubleshooting Support .....</b>	<b>33</b>
<b>12.</b>	<b>Technical Data .....</b>	<b>36</b>
12.1	Identification plate .....	36
12.2	Sauna .....	36
	Specifications .....	36
	Automatic shut-down time .....	37
12.3	Remote control .....	37
12.4	Charging station .....	37
12.5	Interior fixtures and fittings .....	37

# 1. Diagrams and Pictures


## 1.1 Configuration

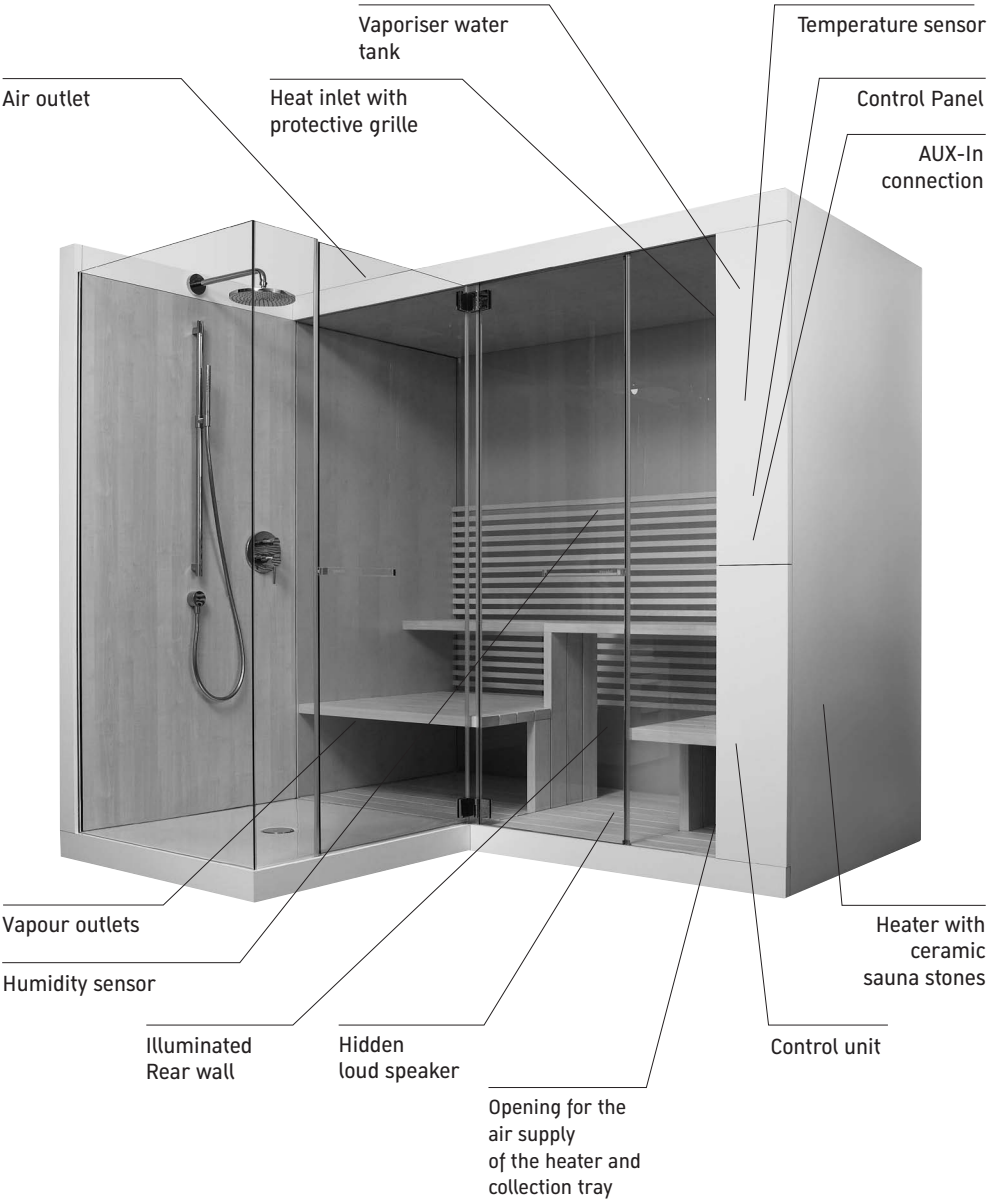

## 1.2 Control panel / Remote control

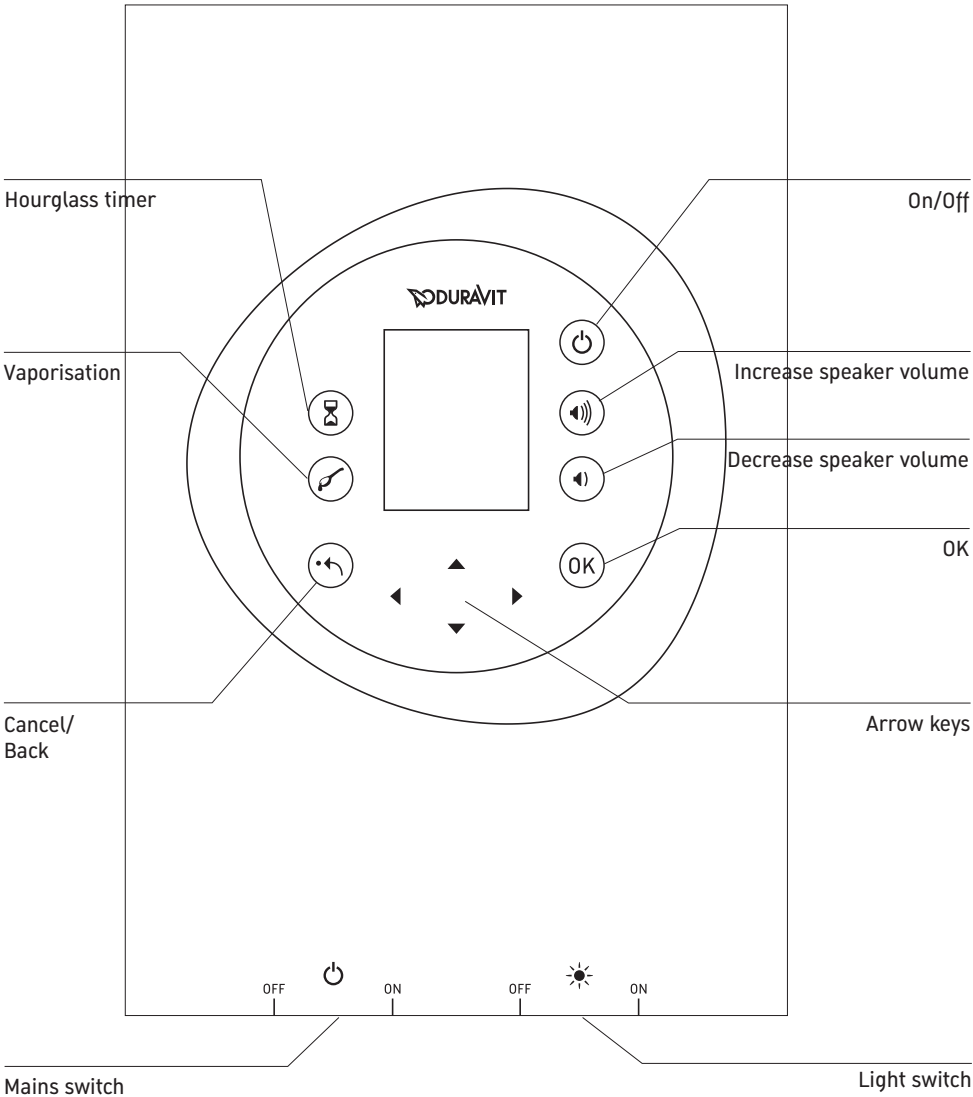 


1.3 Display

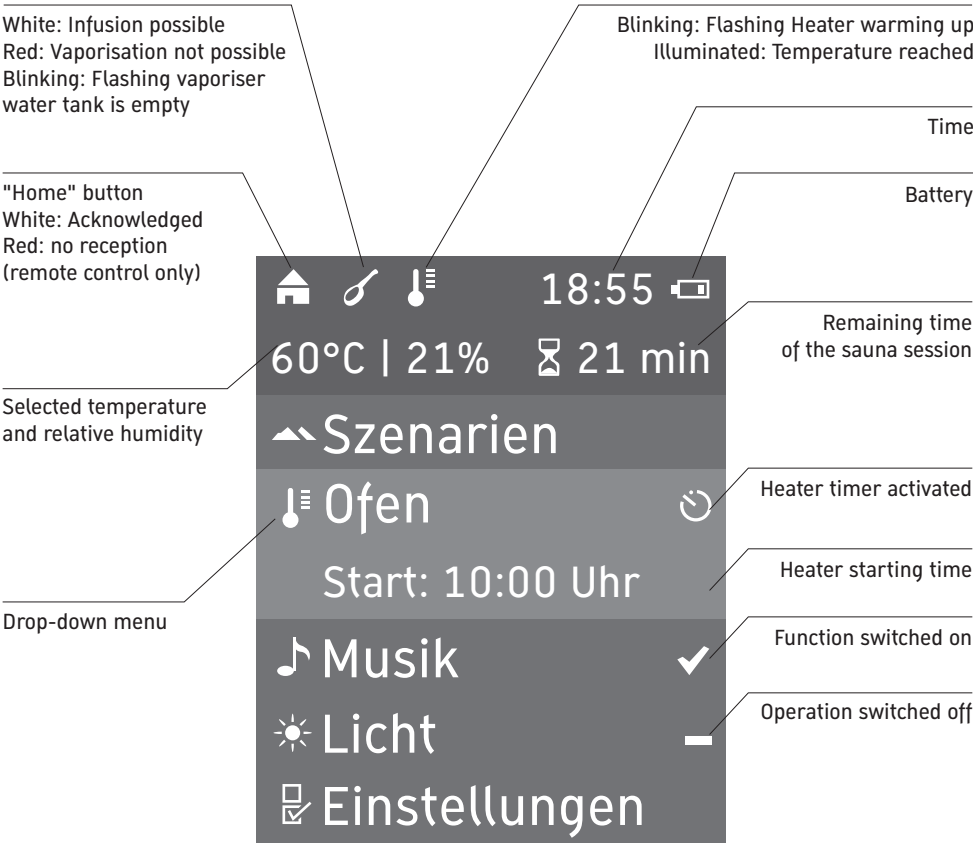

1.4 Menu Hierarchy

 Start screen

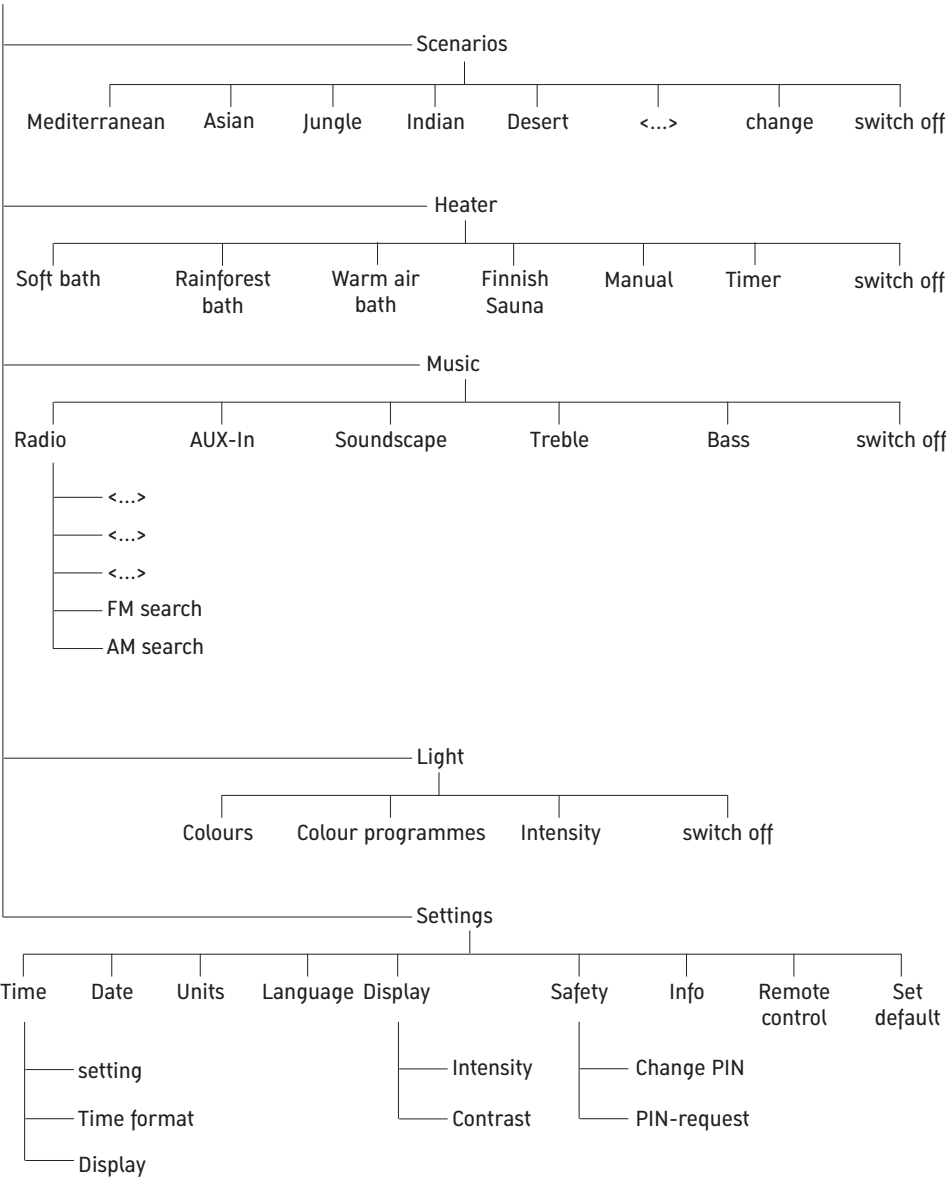

\*only possible via the control panel

## 2. For your Safety

To ensure that you will enjoy your product for years to come, please read these operating instructions carefully, particularly the safety instructions. Keep them in a safe place and in the case of a change in ownership, please ensure they are given to the new owner.

### 2.1 Normal use

The sauna is to be used exclusively on private property, including a hotel room, in a residential home or other similar situations and is not to be used for medical purposes. Use is limited to indoors. It is suitable simply as a relaxing hot air bath. Any other usage will be deemed as not corresponding with normal usage. DURAVIT AG assumes no liability for abnormal usage.

### 2.2 Safety information

Please read and comply with the following safety instructions!

#### The heater is a fire hazard.

- Make sure there are no objects on the protective grill of the heat inlet before you switch on the heater.
- Make sure that the air-supply inlet is unobstructed.
- Never operate the heater without sauna stones as this could lead to unacceptably high temperatures.
- Use only stones that are approved for use in a sauna and place these loosely in the heater. If the stones are packed too tightly, there is a danger of overheating.

#### The sauna stones inflict burns.

- Allow stones to cool down before removing them.

#### This product is designed to be used only by adults.

- Children, elderly or infirm persons or persons with disabilities should only use the sauna under supervision.

#### Only take a sauna when in good health.

- Consult your doctor before using the sauna if your health is in any way impaired, if you suffer from acute illnesses or infections, or if you are pregnant.
- Do not use the sauna bath while under the influence of alcohol, medication and drugs.

#### Microbial contamination of water in the vaporiser water tank.

- Empty the vaporiser water tank after each sauna bath.

#### Remove electrical devices.

- Do not use aroma lamps or air humidifiers in the sauna.

#### Cracks due to constant humidity and ambient temperature.

- Leave the sauna cabin door open after each sauna bath to allow the humid air to escape.

#### Damage to the heater and vaporisation module due to water deposits.




- Never use saline water.
- Only use distilled water in the vaporiser tank.

#### Information on the external fronts and interior fixtures and fittings.


 


- Natural wood is a living material. Because it is a natural material, its structure, grain, porosity and colour will vary.
- Over time, the cabin walls in the area of the heater become darker than the rest of the interior.
- Heat and temperature fluctuations can cause the sauna to warp.

## 3. Description of Symbols

The following warning signs warn you of dangerous situations and their severity:

 <b>Danger!</b>	High risk, lethal hazards, severe injuries.
 <b>WARNING!</b>	Medium risk, severe injuries.
 <b>CAUTION!</b>	Low risk, minor injuries.
<b>Note!</b>	Damage to property.

The following symbols are used:

	Hints and tips are provided here!
	Troubleshooting support is provided here.
	This is a prompt requesting your input.
	Also take a look at the animation at <a href="http://www.duravit.co.uk">www.duravit.co.uk</a>



Articles with this symbol may not be mixed with household rubbish.  
The symbols under the dustbin stand for the following:  
Cd: Battery contains cadmium  
Hg: Battery contains mercury  
Pb: Battery contains lead

## 4. Product Information

### 4.1 Controls

#### Remote control with charging station

As a reminder of the Indian origins of the sauna, the remote control is shaped like a stone, a symbol of the Indian's "sweat tent" stones. Using this you can control all the functions of the sauna.

A light ring is integrated into the charging station which shows the charging state and gives off a friendly, comforting light. If you wish it can be disabled.

#### Operator's Panel

There is a second set of controls behind the flap in the furniture. All sauna functions available on the remote control can also be selected and started using the control panel.

### 4.2 Scenarios

You can store up to six different scenarios, with each scenario having different temperature, humidity, music and lighting. We have predefined five scenarios for you, you can select between Desert, Indian, Jungle, Asia and Mediterranean while the sixth scenario is not predefined. They are individually variable in Home mode and can also be reset again to the original selection.

You will find descriptions of the scenarios in the Sauna Guide!

When changing between scenarios, it can take some time until the predefined values have been reached.

### 4.3 Heater

The heater with ceramic sauna stones is hidden in the side wall of the sauna. In addition to the heating of the cabin up to 110 °C (230 °F) on the ceiling, the humidity can be set between approx. 0% and 50% depending on the temperature and ambient conditions. In addition there are four different bathing settings (Finnish Sauna, Warm Air Bath, Tropical Bath and Soft Steam Bath).

- i** The heater may produce popping noises when in operation. These are caused by expansion of the materials used in the heater: metal, heating elements and stone.
- i** You will find descriptions of the bathing settings in the Sauna Guide!  
The relative humidity can vary from the value you set, depending on the surrounding room environmental conditions.
- i** The sauna continuously sucks in fresh air when being used. Make sure that no cold air (< 18 °C / < 65 °F) is sucked in, e.g. through an open window during the winter.

#### Warm-up time

The heat in a sauna is based on three sources operating in tandem: Firstly, the heater warms the air in the cabin (convection). The ceiling and walls absorb the heat of the air and release energy - in the form of radiant heat - to the sauna bathers. Heat is also transferred by conduction: The heated benches transfer the stored heat directly to the bodies of the bathers. To charge the two heat sources - radiant heat and conduction - sufficiently, another warm-up period of 30 - 60 minutes is recommended after reaching the air temperature in the sauna. Overall, you should allow a warm-up period of 75-135 minutes to ensure optimum through-heating (depending on environmental conditions): At this point the sauna is ready to use.

#### Timer

The timer allows you to restart the heater automatically within the next 24 hours. That way you can enjoy the sauna as soon as you get home after a long day.

#### Sauna stones

The ceramic sauna stones used are heated at approx. 1300 °C (2372 °F) and are therefore extremely durable and resilient. They therefore need to be checked less often than natural stones.

## 4.4 Hourglass timer

Using the hourglass timer integrated into the sauna control you can set a timer for your sauna session.

## 4.5 Vaporisation

If the "Vaporiser" button on the remote control or control panel is pressed, water flows out evenly from the vaporiser water tank behind the flap in the furniture onto the ceramic sauna stones of the heater.

## 4.6 Lighting

A coloured lighting system is a standard fitting in the sauna. This consists of LED elements that illuminate the entire rear wall of the sauna from below. You can choose between single colours or a colour programme and vary the intensity of the colours.

### Colours

You can define the colours of the light via a colour beam.

**i** The effect of the colours is discussed in the Sauna Guide!

### Colour programmes

- Coloured flush  
changing light from a six coloured hard colour progression:  
white – blue – turquoise – green – yellow – red – violet – white - ...  
The time between colour changes can be varied between 5 and 22 seconds.
- Rainbow  
Changing light from a six coloured soft colour progression:  
white – blue – turquoise – green – yellow – red – violet – white - ...  
The duration of the cycle can be varied between 5 and 22 seconds.
- Sunrise  
a 15 minute simulation of the lighting characteristics during daybreak.
- Sunset  
a 15 minute simulation of the lighting characteristics during Sunset.
- Pulsed colours  
pulses of a selected colour with a variable loop time.

## 4.7 Music

The sauna is fitted with a sound system that you can use, either during a sauna or at other times, to listen to the soundscape, the radio or your favourite music. The loudspeakers are hidden in the floor of the sauna.

### Soundscape

The following soundscapes are available:

- Jungle
- Desert
- Indian
- Asian
- Mediterranean

**i** You will find descriptions of the soundscapes in the Sauna Guide!

### Radio

You can pre-tune three radio stations and search in the FM and AM bands.

### External audio source

You can connect your music players (iPhone, mp3-player, HiFi system) via the AUX-In connection and listen to your favourite music.

## 4.8 PIN

In order to prevent unauthorised use of the sauna, a PIN-request can be activated. You will then need to enter the PIN in order to turn on the sauna.

## 4.9 Emergency lighting

Emergency lighting will come on without the controls or the sauna needing to be switched on. This provides a degree of safety and protection in the case of an emergency if it has been activated beforehand.

You can switch on the emergency lighting separately, e.g. when you're cleaning the sauna, and without having to switch on the whole sauna.



## 4.10 Note on the water-tightness (Inipi Ama)

For design reasons, frameless shower partitions cannot absolutely prevent all water from escaping the shower enclosure.

Water splashes, that occur during normal showering, are prevented. Therefore as with any frameless shower enclosure, one cannot completely prevent water from spraying out of the enclosure. However, for reasons of both function and design, a water barrier in the form of a frame that can be closed tightly is not always desirable in exclusive all-glass products.

## 5. Basics of Operation

### 5.1 Buttons and their functions

- Switch on the sauna with the "on/off" button.
- Navigate in the menu using the arrow keys, the "OK" key and the "cancel/back" key:
  - Move between menu items with the "up" and "down" button.
  - Select a menu item with the "OK" button.
  - Set a value with the "right" and left" button.
  - Interrupt a series of steps or jump back to the previous menu item with the "cancel/back" button.
- Press the "Vaporiser" button to start vaporisation.
- Start the timer with the "hourglass" button.

### 5.2 Operating instructions

We've condensed the menu navigation in the operating instructions in the subsequent chapters.

Where you read "Select ...." you need to carry out the following:

- > Press the "down" button until the required menu item is marked.
- > Press the "OK" button.

#### Example

- > Select scenarios > change.
- > Select the scenario you wish to change.

Do the following:

- > Press the "down" button until scenarios is highlighted.
- > Press the "OK" button.
- > Press the "down" button until change is highlighted.
- > Press the "OK" button.
- > Press the "down" button until the scenario you want to change is highlighted.
- > Press the "OK" button.

## 6. Initial Start-up of the Sauna

### Note!

When switched on for the first time, the heater may produce a slight odour due to evaporation of the materials used during the manufacturing processes.

> Ventilate the sauna after heating up for the first time, before taking your sauna bath.

### Step 1: Configure control panel

- > Turn the light switch to ON.
- > Turn the mains switch to ON.
- > Press the "On/Off" button.
  - All languages are listed on the display.
- > Select the language you wish to use.

Two alternative modes are listed on the display:

- Hotel: The scenarios cannot be changed.
  - Home: The scenarios can be changed
- > Select the mode you wish to use.

Set time is displayed:

- > Press the "up" or "down" button until the first digit of the current time is displayed.
- > Press the "right" button to select the next digit.
- > Repeat the last two steps until the current time is displayed.
- > Press the "OK" button.

Set date is displayed:

- > Press the "up" or "down" button until the first digit of the current date is displayed.
- > Press the "right" button to select the next digit.
- > Repeat the last two steps until the current date is displayed.
- > Press the "OK" button.

Set units is displayed.

- > Select the required units.

You've now finished configuring the control panel.

### Step 2: Fill the vaporiser water tank

- > Unscrew the vaporiser water tank from behind the flap in the furniture.
- > Fill the water tank with distilled water.
- > When required, add fragrant essential oils to the water, according to the manufacturer's instructions.
- > Screw the water tank back in.
- > Empty the vaporiser water tank again after the sauna bath to prevent microbial contamination of the water.

## 7. Operating the Sauna

### 7.1 Switching on the sauna

- > Turn the light switch to ON.  
The emergency light is switched on.
- > Turn the mains switch to ON.  
The emergency light may flicker while the controls is starting.
- > Press the "On/Off" button.  
The operating unit is switched on, the emergency light is switched off.  
If you've activated a PIN-request, enter the PIN as follows:
  - > Press the "up" or "down" button until the first digit of the PIN is displayed.
  - > Press the "right" button to select the next digit.
  - > Repeat those last two steps until you have entered the PIN.
  - > Press the "OK" button.You can now switch on the separate parts of the sauna via a scenario or via functions (heater, lighting, music).

### 7.2 Switching off the sauna

---

#### Note!

Damage to the cabin due to overflowing water.

- > Empty the collection tray after every sauna bath and before you refill the vaporiser water tank.
- 

- > Press the "On/Off" button.
- > Select switch off.  
The sauna is switched off.
- > Turn the light switch to OFF.  
The emergency light is switched off.
- > Turn the mains switch to OFF.  
Power supply to the sauna is switched off.

### 7.3 Switching on a scenario

- > Select scenarios.
  - > Select the scenario you wish to use.  
The heater starts to heat up, other settings are not yet started.  
Once the air temperature\* is reached, the following is seen on the control panel:  
"Air temperature reached! Start scenario?".
  - > Press the "OK" button to confirm.  
Perform other scenario settings.
- i** If you would like to enjoy music or coloured lighting while the sauna is heating up, you can switch these on individually. Follow the instructions given under the individual functions.
- i** \*It may still take some time before the sauna is ready, refer to the chapter entitled "Product Information" to learn more about the "warm-up period".

### 7.4 Switching off a scenario

- > Select scenarios > switch off.  
The scenario is switched off.

### 7.5 Changing a scenario\*

... permanently

- > Select scenarios > change.

- > Select the scenario you wish to change.
- > Select the setting you wish to change.
- > Now you can change the setting: Follow the instructions given under the individual functions.

#### ... once / during a sauna session

Prerequisite: Scenario is switched off.

All functions (heater, music, lighting) can be changed. Follow the instructions given under the individual functions.

## 7.6 Changing a scenario name\*

- > Select scenarios > change.
- > Select the scenario you wish to change.
- > Select change name.  
"Enter scenario name" is displayed on the control panel.
- > Press the "up" or "down" button until the correct character is displayed.
- > Press the "right" button to select the next digit.
- > Repeat the last two steps until you have entered the desired scenario name.
- > Press the "OK" button to confirm.  
The scenario name is stored.

## 7.7 Resetting a scenario\*

- > Select scenarios > change.
- > Select the scenario you wish to change.
- > Select reset.
- > Press the "OK" button to confirm that you really do want to reset the settings.  
Settings for the selected scenario are all reset to their defaults.

## 7.8 Switch on the heater

#### ... with preset bathing settings

- > Select heater.
- > Select the desired bathing settings.  
The heater heats up.

#### ... with manual temperature selection

- > Select heater > manual  
An X-Y coordinate axis is displayed.
- > Press the "up" or "down" button to set the temperature.
- > Press the "right" or "left" button to set the relative humidity.
- > Press the "OK" button.  
The heater heats up.

**i** Relative humidity of between 0% and 50% can be selected manually depending on the temperature. A failure report is displayed and the value turns red if you move outside of the permitted range.

### Switching the heater timer on



#### **Danger!**

#### **The heater is a fire hazard!**

- > Make sure that there are no objects
    - on the protective grille of the heat inlet or
    - in front of the air supply opening for the heater.
- 
- > Select heater > timer.  
"Enter start time:" appears on the display.  
Enter the time at which the heater should be turned on, as follows:
  - > Press the "up" or "down" button until the first digit of the time is displayed.
  - > Press the "right" button to select the next digit.
  - > Repeat those last two steps until the correct time is displayed.
  - > Press the "OK" button to confirm.  
A coordinate axis is displayed to set the desired temperature.
  - > Press the "up" or "down" button to set the temperature.
  - > Press the "right" or "left" button to set the relative humidity.
  - > Press the "OK" button.  
The timer symbol appears in the display, and the start time appears in the drop-down menu.

**i** The sauna must remain on and the door closed in order to be able to start the heater using the timer!

\*only possible in Home mode

## Turning off timer for heater

- > Select heater > timer > switch off.  
The heater is switched off.

## 7.9 Switching off the heater

- > Select heater > switch off.

## 7.10 Switching on lighting

### Switching on colours

- > Select lighting > colour.  
A colour beam is displayed.
- > Press the "left" or "right" button to select the desired colour.
- > Press the "OK" button.  
The lighting is switched on.

### Switching on a colour programme

- > Select lighting > colour programme.
- > Select the desired colour programme.  
If you selected sunrise or sunset then you've finished.  
The following colour programmes require other steps:  
**Rainbow or Colour Changes**
- > Press the "right" or "left" button to set the speed of the colour change.
- > Press the "OK" button to confirm.  
The lighting is switched on.
- Pulsed colours**
- > Press the "up" or "down" button to set the desired colour.
- > Press the "OK" button.
- > Press the "up" or "down" button to set the speed of the colour change.
- > Press the "OK" button to confirm.  
The lighting is switched on.

## 7.11 Switching off lighting

- > Select lighting > switch off.  
The lighting is switched off.

## 7.12 Setting the intensity of the lighting

- > Select lighting > intensity.
- > Press the "left" or "right" button to select the desired intensity.
- > Press the "OK" button.  
the intensity is changed.

## 7.13 Switching on the timer

- > Press the "hourglass" button.
- > Press the "left" or "right" button to select the desired duration of the sauna session.
- > Press the "OK" button.  
The timer is switched on. The time remaining is displayed in the task bar.

## 7.14 Switching on music

### Switching on soundscapes

- > Select music > soundscapes.
- > Select the desired soundscape.  
Music is switched on.

### Switching on the radio

- > Select music > radio.
- > Select the desired radio station.  
Music is switched on.

### Playing from an external audio source

- > Using an AUX adaptor connect the audio source to the AUX-In connector.
- > Select music > AUX-In.  
The AUX-In is activated.
- > Operate the music device using its controls.

## 7.15 Switching off the music

- > Select music > switch off.  
The music is switched off.

## 7.16 Searching for and storing a radio station

- > Select music > radio > FM or AM search.  
"set frequency" is displayed.
- > Press the "left" or "right" button until the desired radio station is displayed.
- > Press the "OK" button to confirm.  
"station number" is displayed.
- > Press the "left" or "right" button until the station number in which you wish to store the radio station is displayed.
- > Press the "OK" button.  
The station is displayed in the radio sub-menu.

## 7.17 Varying the sound volume

- > Press the "sound volume plus" or "sound volume minus".

## 7.18 Setting the treble

- > Select music > treble.
- > Press the "left" or "right" button until the desired setting is displayed.
- > Press the "OK" button.  
The treble is changed.

## 7.19 Setting the bass

- > Select music > bass.
- > Press the "left" or "right" button until the desired setting is displayed.
- > Press the "OK" button.  
The bass is changed.

## 7.20 Starting vaporisation

Prerequisite: Vaporiser water tank has been filled, heater is at operating temperature (>60 °C/>140 °F).

- > Press the "vaporiser" button.

- i** The sauna stones must be allowed to heat up again following each vaporisation to produce an intense burst of steam.  
The "Vaporiser" symbol is illuminated white if an infusion is possible.  
The "Vaporiser" symbol flashes red
  - because an infusion is not possible as the sauna stones must be allowed to heat up again.
  - The "Vaporiser" symbol flashes red as the vaporiser water tank is empty.

## 7.21 Filling the vaporiser water tank / adding fragrant essential oils



### **Danger!**

**Risk of fire due to highly flammable substances.**

- > Never put alcohol in the vaporiser water tank.
- > Never add undiluted concentrates to the vaporiser water tank.

### **Note!**

**Damage to the heater and vaporisation module due to water deposits.**

- Never use saline water.
- Only use distilled water in the vaporiser tank.

**Damage to the vaporisation unit due to oil-based fragrant essences.**

- > Use water-based fragrant essences.

**Damage to the cabin due to overflowing water.**

- > Empty the collection tray after every sauna bath and before you refill the vaporiser water tank.

- > Unscrew the vaporiser water tank from behind the flap in the furniture.
- > Fill the water tank with distilled water.
- > When required, add fragrant essential oils to the water, according to the manufacturers instructions.
- > Screw the water tank back in.
- > Empty the vaporiser water tank after the sauna bath.

## 7.22 Charging the remote control

- > Place the remote control on the charging station.  
The light ring on the charging station blinks while the battery is charging.  
As soon as the battery is fully charged the ring stays illuminated continuously.

## 7.23 Connecting the remote control with Bluetooth

On the control panel:

- > Select settings > remote control.  
The Bluetooth address is displayed.
- > Note down the Bluetooth address (BT address).

On the remote control:

- > Select settings > remote control.  
Enter the Bluetooth address you just read from the control panel:
- > Press the "up" or "down" button until the correct digit is displayed.
- > Press the "right" button to select the next digit.
- > Repeat the last two steps until you have entered the Bluetooth address.
- > Press the "OK" button.  
The sauna controls now make a connection to the remote control.  
When the symbol "home" on the remote control is white, it is within the reception range of the controls.

# 8. Changing Settings

## 8.1 Changing the time

- > Select settings > time > set.
- > Press the "up" or "down" button until the first digit of the time is displayed.
- > Press the "right" button to select the next digit.
- > Repeat those last two steps until the correct time is displayed.
- > Press the "OK" button to confirm.

## 8.2 Changing the time format

- > Select settings > time > time format.
- > Select the desired time format.

## 8.3 Displaying / hiding the time

- > Select settings > time > display > display or hide.  
The time is either displayed or removed from the task bar.

## 8.4 Changing the date

- > Select settings > date.
- > Press the "up" or "down" button until the first digit of the date is displayed.
- > Press the "right" button to select the next digit.
- > Repeat those last two steps until the correct date is displayed.
- > Press the "OK" button to confirm.

## 8.5 Changing the units (°C/F)

- > Select settings > units.
- > Select the units desired.

## 8.6 Changing the language

- > Select settings > language.
- > Select the desired language.
- ? Selected the wrong language and you can't navigate to the Language menu?
  - > Press "Off" and "OK" simultaneously.  
You are now in the Language menu.
  - > Select the desired language.
  - > Press the "OK" button.  
The desired language is activated.

## 8.7 Changing the intensity of the display

- > Select settings > display > intensity.
- > Press the "left" or "right" button until the desired intensity is set.
- > Press the "OK" button to confirm.

## 8.8 Changing the contrast of the display

- > Select settings > display > contrast.
- > Press the "left" or "right" button until the desired contrast is set.
- > Press the "OK" button to confirm.

## 8.9 Change PIN

- > Select settings > security > change PIN.  
Enter the current PIN:
- > Press the "up" or "down" button until the first digit of the PIN is displayed.
- > Press the "right" button to select the next digit.
- > Repeat those last two steps until you have entered the PIN.
- > Press the "OK" button.
- > Enter the new PIN as just described.
- > Press the "OK" button.
- > Enter the new PIN a second time for verification, as just described.
- > Press the "OK" button to confirm.

## 8.10 Turning on the PIN-request

- > Select settings > security > PIN-request > on.  
Enter the 4 digit PIN:
- > Press the "up" or "down" button until the first digit of the PIN is displayed.
- > Press the "right" button to select the next digit.
- > Repeat those last two steps until you have entered the PIN.
- > Press the "OK" button.
- > Enter the new PIN a second time for verification, as just described.
- > Press the "OK" button.

The PIN will be requested when attempting to turn on the sauna.

## 8.11 Turning off the PIN-request

- > Select settings > security > PIN-request > off.  
For security reasons you must enter the PIN as follows:
- > Press the "up" or "down" button until the first digit of the PIN is displayed.
- > Press the "right" button to select the next digit.
- > Repeat those last two steps until you have entered the PIN.
- > Press the "OK" button.

The PIN will no longer be requested when attempting to turn on the sauna.

## 8.12 Resetting back to defaults

- > Select settings > default > reset.  
To ensure the settings are not reset to their defaults by accident, the security code 2412 must be entered.
- > Press the "up" or "down" button until the correct digit is displayed.
- > Press the "right" button to select the next digit.
- > Repeat the last two steps until you have entered the complete security code.
- > Press the "OK" button.  
All settings are reset to their defaults.

## 8.13 Activating / deactivating the light ring on the charging station

- > Find a thin pin or straightened paper clip that fits through the small hole in the charging station located next to the power cable connector.
- > Press this pin through the hole for three seconds.

# 9. Cleaning and Maintenance

---

### Note!

**The surfaces may be damaged by using the wrong cleaning agents.**

- Only use a cleaning agent that is recommended by Duravit.
  - Never use abrasive, aggressive or chemical cleaning agents.
-

## 9.1 Outer surfaces

### Natural wood

Natural wood is a living material. Because it is a natural material, its structure, grain, porosity and colour will vary.

- > Wash water deposits away immediately with a soft cloth.
- > Wipe the surfaces with a damp chamois.
- > Remove stubborn soiling with hot water and dishwashing liquid as necessary.

### High gloss finish

- > Remove light soiling with a cloth.
- > Remove more extensive soiling with non-abrasive car polish but only in exceptional cases as frequent use will reduce the thickness of the varnish layer.

### Melamine

- > Remove stubborn soiling with hot water and dishwashing liquid as necessary.

## 9.2 Interior fixtures and fittings

### Cabin floor

- > Remove the lower left seating surface.
- > Roll up and remove the wooden grids of the cabin floor.
- > Clean the grey subfloor with a damp cloth.

### Seating and floor grids

- > Remove more stubborn staining by sanding in the direction of the wood grain with sandpaper (grade 240).

## 9.3 Vaporiser water tank

- > Clean the water tank with warm water and a little dishwashing liquid.

## 9.4 Heater

In particularly damp ambient conditions or if the sauna is not used for long periods, the heating elements may become loaded with moisture.

- > Heat up the heater at least every 5-6 weeks to avoid this.

## 9.5 Openings for the air supply

Dust can easily accumulate in the openings for the air supply as air is drawn in at these points. This restricts the heater air convection which may in turn give rise to impermissible temperatures.

- > Make sure that the openings for the air supply are always unobstructed.

## 9.6 Collection tray

- > Remove the collection tray.
- > Clean it with warm water and a little washing-up liquid after every sauna bath.
- > Rinse this thoroughly to remove all cleaning agent.

## 9.7 Replacing the sauna stones

The ceramic sauna stones are extremely durable and resilient. Nevertheless, we recommend that you check the sauna stones at regular intervals and replace them as required.

- > If you think the sauna stones need to be replaced, please call Customer Service.

## 9.8 Control Panel

- > Clean the control panel with a soft, damp cloth.

## 9.9 Remote control

- > Clean the remote control with a soft, damp cloth.

## 9.10 Charging station



**Danger!**

**Lethal danger when live electrical parts make contact with water.**

- > Un-plug the charging station from the mains.



- > Remove light soiling with a soft, damp cloth.
- > Remove extensive staining by rubbing with a damp scouring sponge and scouring detergent.

## 9.11 Glass

- > Clean the glass using a commercially-available glass cleaner.
- > After every shower, dry the glass surface with a glass wiper (only Inipi Ama).

## 9.12 Acrylic

### Cleaning

- > Clean acrylic with a soft, damp cloth.
- > Use the Duravit Maintenance Set for Acrylic Surfaces for the occasional thorough cleaning and for removing stubborn spots.
- > Remove extensive soiling with warm water and a liquid detergent, dish washer liquid or soap suds.

### Damage

- > Remove scratches and other surface damage with the Duravit Acrylic Surface Maintenance and Repair Set.

## 9.13 Plumbing hardware

### Note!

#### Damage to the surfaces through the use of the wrong cleaner!

- Do not use cleaners that
  - contain hydrochloric acid, formic acid or acetic acid
  - contain phosphoric acid or chlorine bleach, or
  - abrasive effect.
- Do not mix cleaners.
- Do not use pad sponges or micro fibre cloths.
- Do not use steam cleaners as the high temperatures could damage the product.
- Spray cleaner onto the cloth and under no circumstances onto the tap fittings. The spray can penetrate openings and gaps in the taps and cause damage.
- Take note of the cleaning instructions and the time taken to work under the specific

conditions and do not allow the cleaner to remain on the surface longer than necessary.

- > Clean the taps regularly in order to prevent a build-up of limescale.
- > Follow the cleaning manufacturer's instructions.
- > Rinse with clean water to remove all traces of the cleaner.

## 10. Disposal



You have purchased a battery-powered remote control from us. Batteries (rechargeable batteries) may not be mixed with household rubbish. You are required as a consumer to take them to a designated collection centre. You may return the remote control at no charge to where the product was purchased or the collection/recycling centre in your community.

## 11. Troubleshooting Support

Problem	Potential cause	Solution	see page
Charging station not illuminated.	Light ring deactivated.	> Activate light ring.	29
Sauna does not respond to inputs from the remote control.	Remote control is not within the reception range of the sauna.	> Move the remote control closer to the sauna until the "home" symbol is illuminated white.	26
	Remote control is not connected via Bluetooth.	> Connect the remote control via Bluetooth.	
Sauna does not start or cannot be switched on	Mains switch switched off.	> Turn the mains switch to ON.	
	Mains fuse is switched off.	> Switch on mains circuit breaker.	
	Ground-fault switch (RCD) or circuit breaker has tripped.	> Disconnect the sauna from the mains. > Call customer service.	

Problem	Potential cause	Solution	see page
Ground-fault switch (RCD) has tripped.	Accumulation of moisture on the heating elements.	> Call customer service.	
Forgotten PIN		> Unlock the sauna using the Super-PIN; you can obtain this from our Customer Service	
Incorrect language set		> Press the "Off" and "OK" buttons simultaneously to access the Language menu.	27
Remote control is no longer working.		> Reset the remote control: > Press the "right", "left" and "On/Off" buttons simultaneously until the display turns black or for a minimum of 2 seconds. > If the problem persists, call Customer Service	
Remote control display has frozen.			
<b>Messages</b>			
"Door open, sauna switches off!"	Door is open	> Close the door.	
"Door open, heater does not start! Close the door, restart the heater."	Door is open	> Close the door. > Restart the heater.	
"Door open! Close the door, otherwise the heater is switched off."	Door is open	> Close the door.	
"Overheating of the sauna heater. Heater switched off! Switch off the sauna, let it cool down and then restart it."	Overheating; opening for the air supply or air outlet is sealed or covered.	> Disconnect the sauna from the mains and let it cool down. • The sauna can be used again once it has cooled down.	
"Sauna temperature too high, heater switched off! Switch off the sauna, let it cool down and then restart it."			
"Electronics temperature too high, heater switched off! Switch off the sauna, let it cool down and then restart it."			

Problem	Potential cause	Solution	see page
"Battery in the controls is empty! Inform Customer Service, quote error code 200."		> Make a note of the error code and call Customer Service. • Sauna can continue to be used. • Date, time and timer function are no longer working	
"Defective real-time clock! Inform Customer Service, quote error code 207."			
"Defective SD card. Inform Customer Service, quote error code 214."		> Make a note of the error code and call Customer Service. • Stored data is no longer available e.g. scenario sound, warning and advisory tones	
"Defective Bluetooth. Inform Customer Service, quote error code 216."		> Make a note of the error code and call Customer Service. • Sauna can no longer be operated with the remote control	
"Error on the vaporisation module! Inform Customer Service, quote error code 223."		> Make a note of the error code and call Customer Service. • An infusion is no longer possible	
"Vaporiser water tank is empty! Add distilled water."	Vaporiser water tank is empty.	> Add distilled water.	25
	Vaporiser water tank is leaking.	> Screw on the vaporiser water tank firmly and check the seal.	
"Infusion temperature is too low! Wait a short time and try the infusion again."	"Sauna temperature is too low.	> An infusion is possible if the "Vaporiser" symbols is illuminated white.	
"Sauna session is finished."	Hourglass timer has expired.		
"No connection to the controls" (only the remote control)	Controls/sauna is switched off.	> Switch on the sauna.	18
	Bluetooth address is incorrect.	> Enter the Bluetooth address of the controls in the remote control.	26

Problem	Potential cause	Solution	see page
"Heater is off as the max. permitted operating time has been exceeded! Heater is ready again in 6 hrs."	Maximum heater operating time has been reached.	> The heater can be switched on again once the resting phase has expired.	
"Heater is in the resting phase as the max. permitted operating time has been exceeded!"			
"Heater is off as the maximum operating time has been exceeded! Switch off the sauna and then restart it."		> Disconnect the sauna from the mains and then restart it.	
Failure report that cannot be remedied.		> Disconnect the sauna from the mains. > Make a note of the error code and call Customer Service.	

## 12. Technical Data

### 12.1 Identification plate

The identification plate is on the back page of the Operating Instructions.  
 This product conforms to all the appropriate EU guidelines.  
 DIN EN 60335-2-53

### 12.2 Sauna

#### Specifications

Rated voltage	380-415 V
Frequency	50/60 Hz
Max. nominal output	6.6 kW
Protection class	IP X5
	Protection against sprayed water (from any direction)
Temperature range	15-40 °C (59-104 °F)
Max. water pressure (only Inipi Ama)	1.0 MPa (10 bar)

#### Automatic shut-down time

Lighting (except emergency lighting)	12 hours
Sound	12 hours
Heater	Home mode: 6 hours Hotel mode: 12 hours

### 12.3 Remote control

Temperature range	15-60 °C (59-140 °F)
Rem. Ctrl. Prot. type	IP X8
Material	Epoxy resin

### 12.4 Charging station

Rated voltage	100-240 V
Frequency	50/60 Hz
Nominal output	20 W
Material	LG HI-MACS®

### 12.5 Interior fixtures and fittings

Material	Material
• Seating and floor grids	Aspen wood
• Walls and ceilings	Birch
Max. load per lying/sitting level	250 kg (distributed load)